


SUPVAN

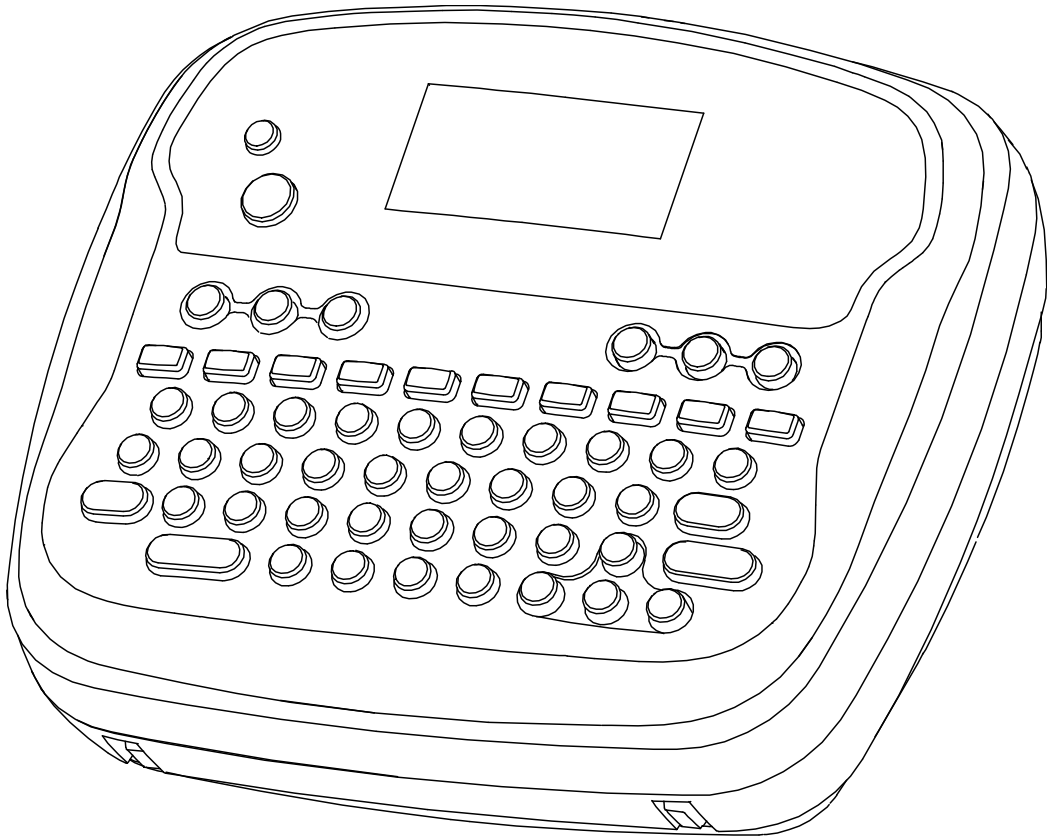

LP 6185A

User Manual

| | |
|-----------------------------|----|
| Declaration..... | 1 |
| Warning..... | 2 |
| Precautions..... | 3 |
| Contents..... | 4 |
| Specification..... | 5 |
| Power Supply..... | 6 |
| Insert a Tape Cassette..... | 7 |
| LCD Display..... | 8 |
| Keyboard..... | 9 |
| Functional Keys..... | 11 |
| Combination Keys..... | 12 |
| Create General Labels..... | 13 |
| Create Flag Labels..... | 14 |
| Create Wrap Labels..... | 15 |
| Create Template Labels..... | 16 |
| Label Library..... | 17 |
| Connect to computer..... | 18 |
| Troubleshooting..... | 19 |
| Symbol..... | 25 |
| Template Details..... | 36 |
| Library Details..... | 37 |

- For any information about the instruction contents, Supvan reserves the right to vary because of the upgrade of the printer.
- Supvan will not be responsible for any consequence caused by operations which do not follow the requirements of manual.
- If you want to know more about the printer or Supvan, please visit: www.supvan.com.cn









Warning

- ⚠ Do not touch the AC adapter and printer during a thunder storm.
- ⚠ Do not damage, or place heavy objects on the power cord or plug. Always hold the AC adapter when disconnecting from the power outlet.
- ⚠ Do not use sharp objects to change the batteries.
- ⚠ Do not touch metal parts around the print head immediately after printing.
- ⚠ Do not touch the cutter blade.
- ⚠ Do not let any metal or liquid get into the printer. This may damage the internal parts of printer or even cause fire or electric shock.
- ⚠ Do not use a battery other than that specified. Do not use combinations of old and new batteries or combinations of different types, different charging levels, different manufacturers or different models.

Precautions

- Please use a single power socket. Do not use any multiple socket inserted with multiple devices, this may cause a fire or electric shock.
- Do not use any power plug with wet hand in case of any electric shock.
- Do not use any AC power which is not within 100-240V.
- Do not disassemble or modify the printer without any authorization. This may lead to fire or electric shock.
- Please keep the printer away from alcohol, gasoline and other flammable solvents as well as any ignition source to prevent any deflagration and fire.
- Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, or the color of the label may change or be transferred to other objects. Before applying the label, check the environmental conditions and the material.
- Do not place the printer/batteries/AC adapter in direct sunlight or rain, near heaters or other hot appliances, in any location exposed to extremely high or low temperatures or high humidity, or in dusty locations.
- Do not try to print if the label cassette is empty; it may damage the print head.
- Do not pull the tape while printing or feeding; it will damage the tape and the printer.
- Any data saved in memory may be lost due to failure or repair of the printer, or if the battery expires.

Contents

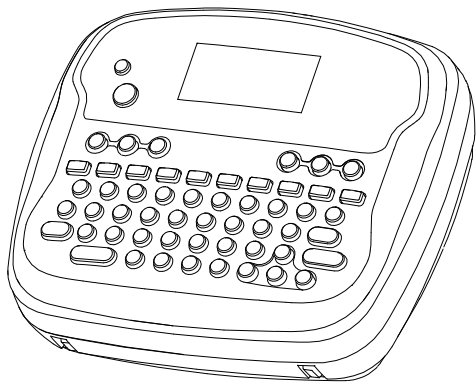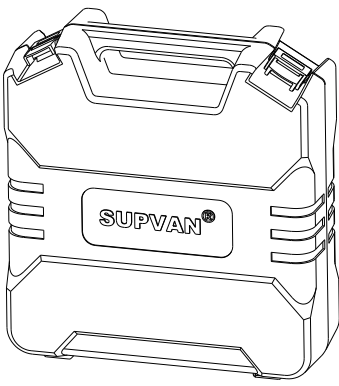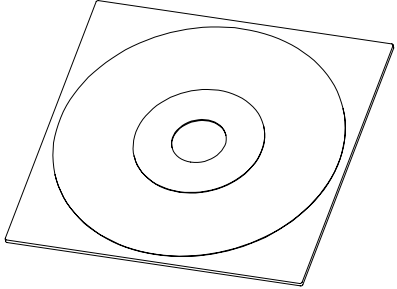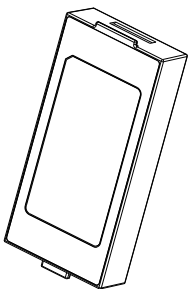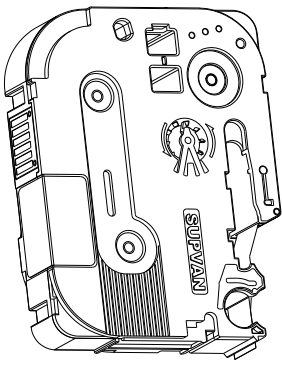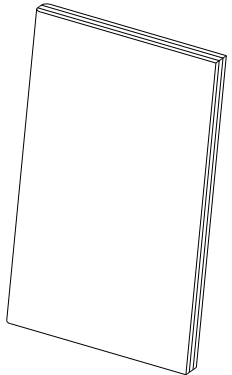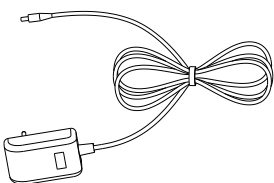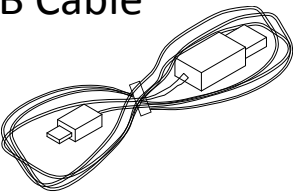
| | | |
|---|---|--|
| <p>Label Printer</p>  | <p>Hard Case*</p>  | |
| <p>CD-ROM</p>  | <p>Lithium Battery**</p>  | |
| <p>Label Tape</p>  | <p>User Manual</p>  | <p>Power Adaptor</p>  |
| | | <p>USB Cable</p>  |

*and** are optional.

Specification

| | |
|-----------------------|--|
| Printing Method | Thermal Transfer |
| Resolution | 200dpi |
| Label Width | 6mm / 9mm / 12mm / 18mm |
| Printing Speed | Up to 20mm/s |
| File storage | Up to 64 files |
| Max. Height of Letter | 16 mm |
| Fonts | 8 fonts |
| Max. Labels No. | Up to 50 labels in 1 file |
| Keyboard | QWERTY layout |
| Display | LCD, Back-lit, 2-line info display |
| Printable Content | English letters, Numbers, Bar Codes, QR Codes, Symbols |
| Operating Environment | Temperature: 10°C ~ 35°C; RH: 20% ~ 80%RH |
| Power | AC 9V 3.5A |
| Measurement | 174×154×72 (mm) |


Power Supply

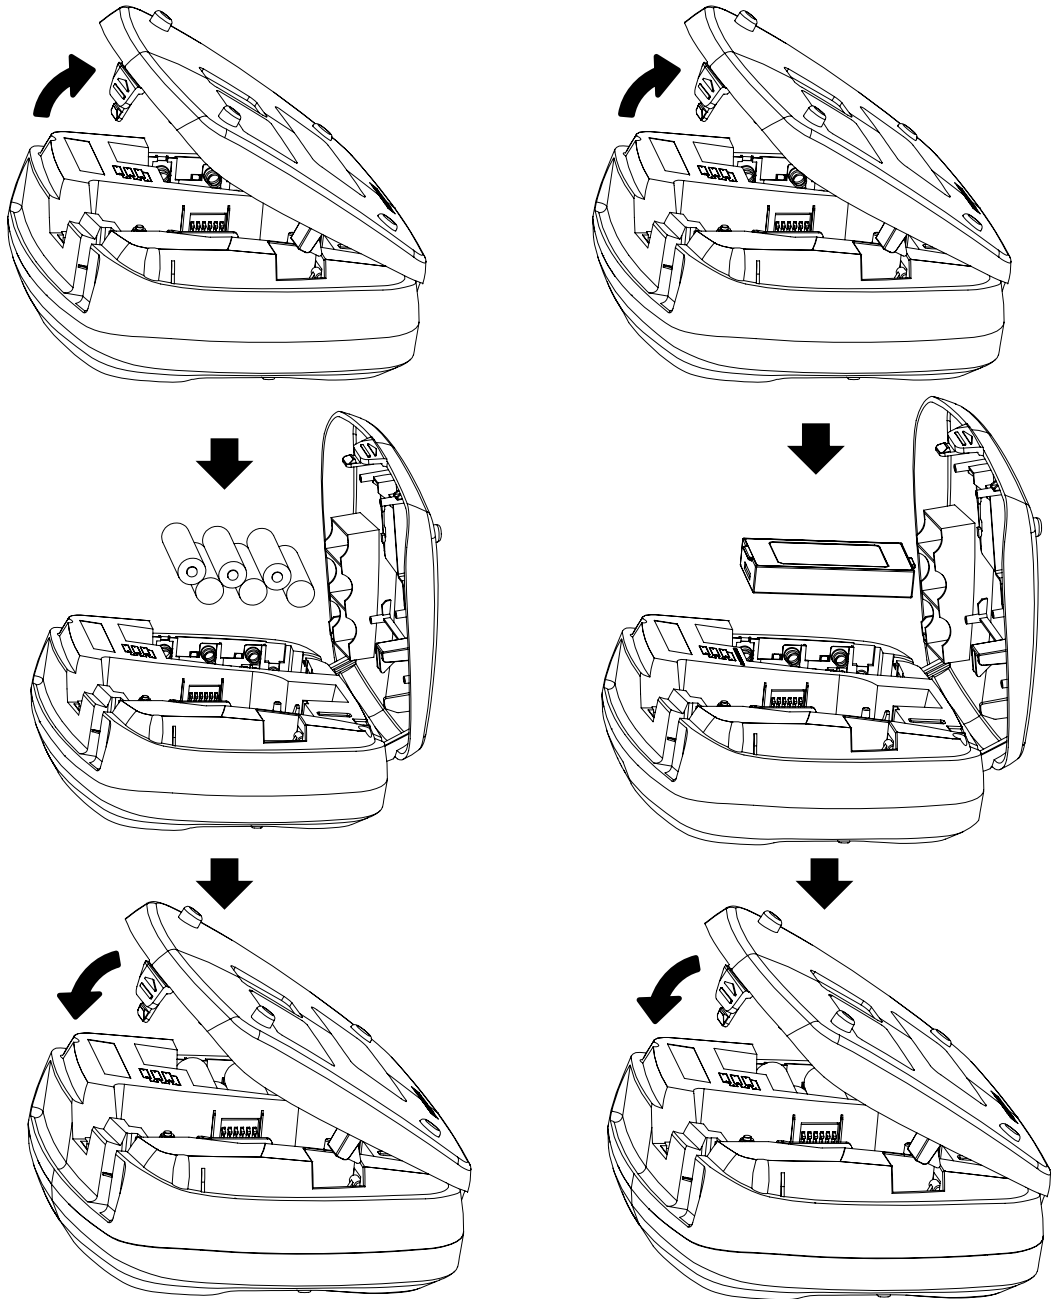


When using six new AA alkaline batteries or lithium batteries, make sure the poles are pointing in the correct directions.

To remove the batteries, reverse the installation procedure.


Insert a Tape Cassette

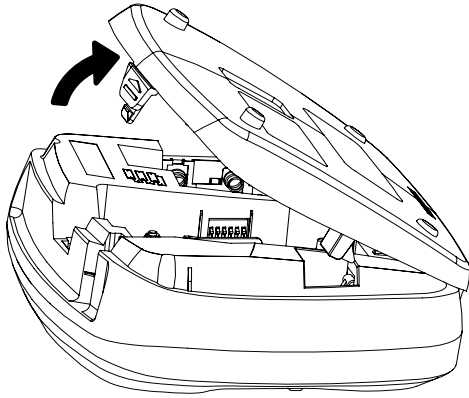

Open the back cover

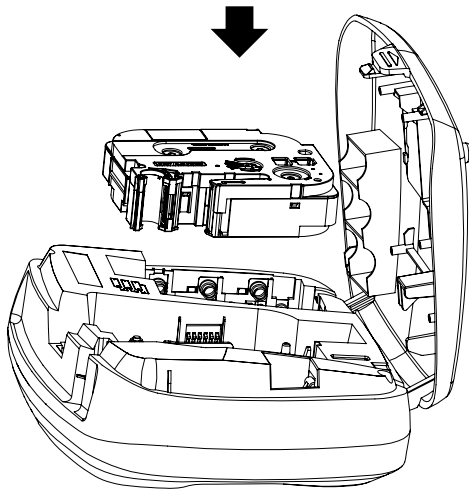


Tighten the label, then insert the label cassette in position which marked in printer

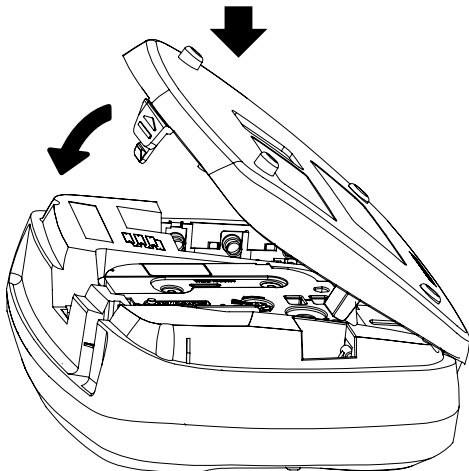


Close the back cover

To insert a label cassette, follow the step above.
To remove the label cassette, reverse the installation procedure.

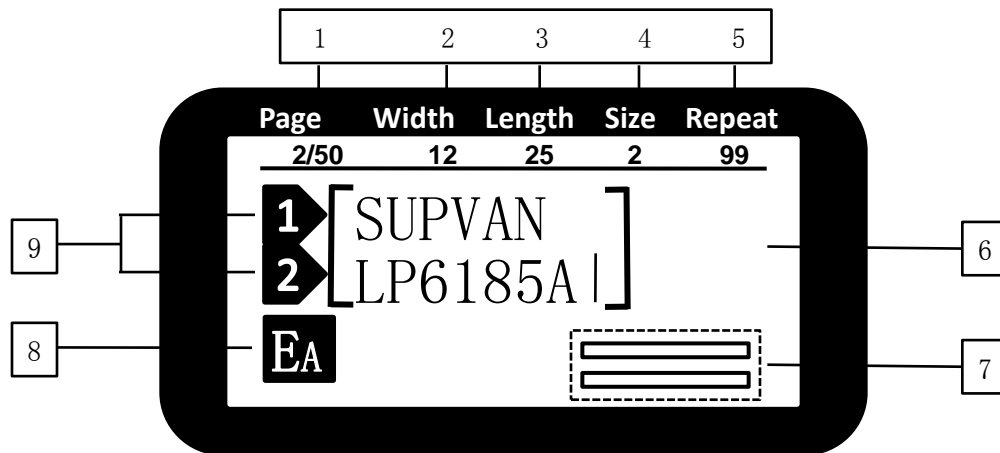



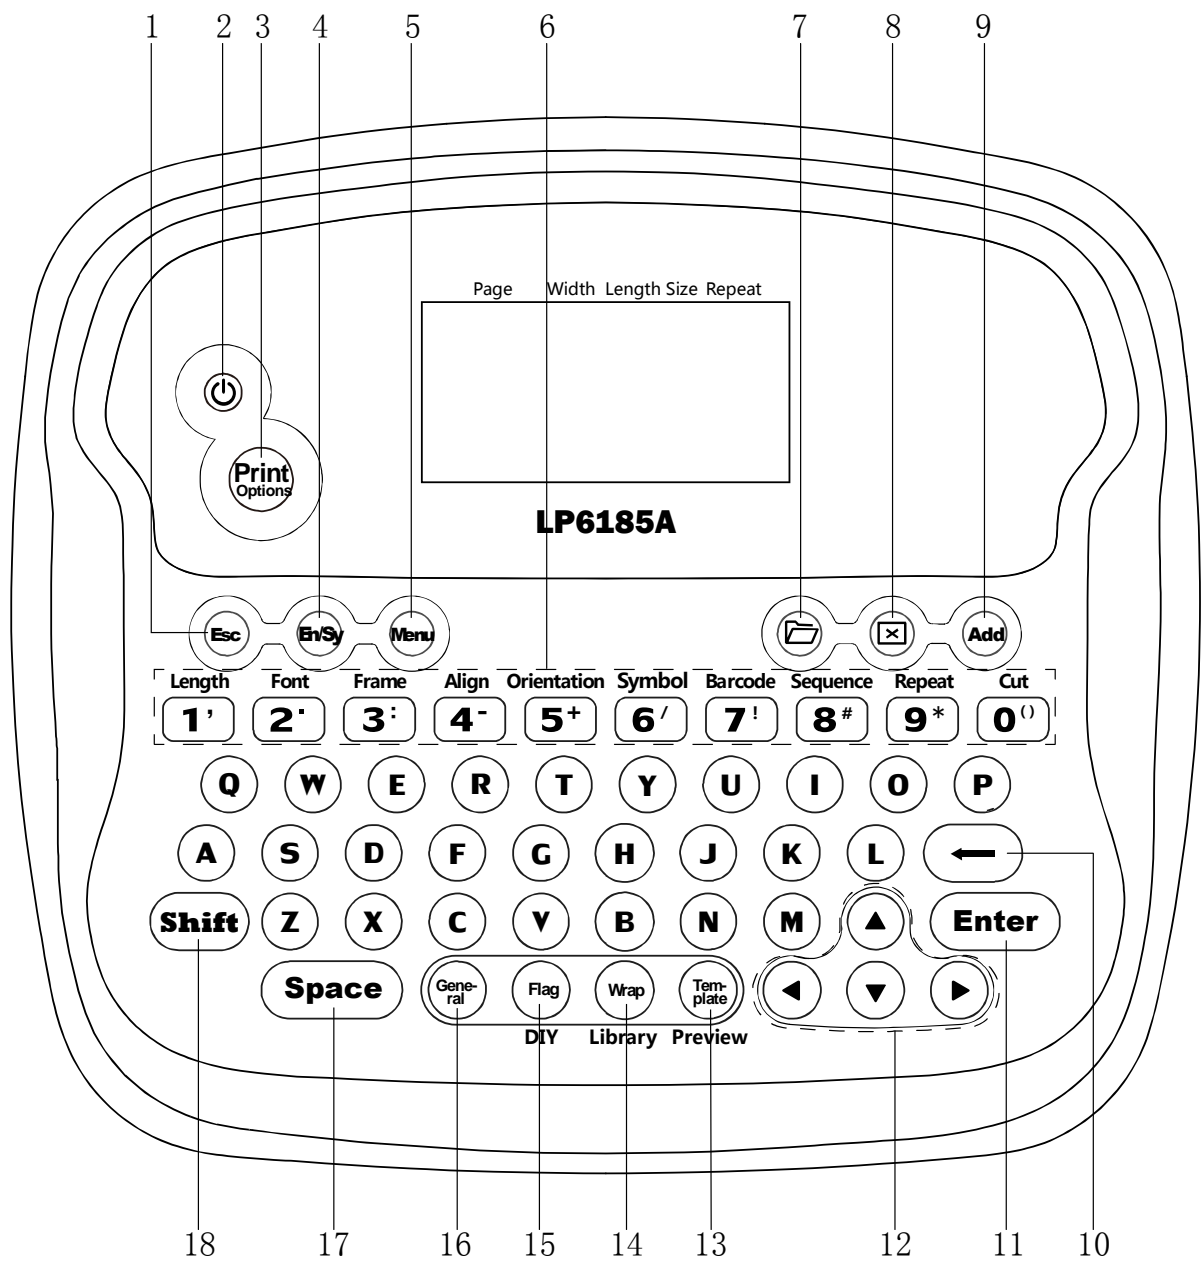


| No. | Item | Introduction |
|-----|-------------------|--|
| 1 | Page | Current Label/All Labels; Editing Area/All Editing Area in One Label |
| 2 | Width | Label Width (6mm, 9mm, 12mm, 18mm) |
| 3 | Length | Current label's length, "A" stands for automatic |
| 4 | Size | Current line's character size, "A" stands for automatic |
| 5 | Repeat | Repeat times of current label |
| 6 | Editing Interface | 2-line display, each line up to 12 characters |
| 7 | Preview | 【Shift】 + 【Template】 to turn on or off |
| 8 | Input Method | Current input method |
| 9 | Line Number | Line number in current label |

Keyboard



Keyboard

| No. | Key | Introduction |
|-----|---|---|
| 1 | Esc | Stop printing process or ESC the current setting or operation to return to the previous level of menu or the input interface. |
| 2 |  | Turn on/off the printer |
| 3 | Print Options | Short press: print directly Long press: copy print; range print; cursor print; tempo print |
| 4 | En/Sy | Input modes: EA (English uppercase letter), Ea (English lowercase letter), Sy (Symbol) |
| 5 | Menu | Setting menu |
| 6 | Number 1-0 | Short press: Number 1-0 Long press: Get into function menu |
| 7 |  | New/Save/Open/Delete file |
| 8 |  | Delete all |
| 9 | Add | Create new label |
| 10 |  | Backspace |
| 11 | Enter | Enter/Create new line |
| 12 |  | Move the cursor |
| 13 | Template | Insert label template |
| 14 | Wrap | Create wrap label |
| 15 | Flag | Create flag label |
| 16 | General | Create general label |
| 17 | Space | Space |
| 18 | Shift | Shift key |

Functional Keys


Long press 1-0 to realize the functional keys

| Number | Functional Keys | Second-level Directory |
|---------------|------------------------|---|
| 1 | Length | Length; Margin; Char space; Lines space |
| 2 | Font | Font; Size; Width; Bold; Italic |
| 3 | Frame | Frame; Underline; 690Underline |
| 4 | Align | Center; Left; Right; Justify |
| 5 | Orientation | Horizontal; Vertical; Rotate; Mirror |
| 6 | Symbol | Unit; Number; Mathematics; Bracket; Punctuation; Arrow; Superscript; Subscript; Russian; Pinyin; Latin; Tabulate; Hiragana; Katakana; Safety; Electrical; Communicate; Prohibited; Transport; Office; Geometry; Animal; Insect; People; Food; Sports; Creativity; Daily Use |
| 7 | Barcode | Bar Code (CODE39, I-2/5, CODE128, EAN128, EAN13, EAN-8, UPC-A, UPC-E, CODABAR); QR Code |
| 8 | Sequence | 0-999; 000-999; A-Z; a-z |
| 9 | Repeat | Range: 1-99 |
| 0 | Cut | Cut; Solid line; None |


Combination Keys

| Combination Key | Introduction |
|-----------------------------|--|
| 【Shift】 + 【Print】 | Copy Print; Range Print; Cursor Print; Tempo Print |
| 【Shift】 + 【▲】 | Move the cursor to previous label or same label's different area |
| 【Shift】 + 【▼】 | Move the cursor to next label or same label's different area |
| 【Shift】 + 【◀】 | Move the cursor to current label's beginning |
| 【Shift】 + 【▶】 | Move the cursor to current label's end |
| 【Shift】 + 【←】 | Delete all/current label/current line |
| 【Shift】 + 【0-9】 | Insert punctuations |
| 【Shift】 + 【C】 | Copy current line (not include sequence or barcode) |
| 【Shift】 + 【V】 | Paste the copy information |
| 【Shift】 + 【W】 | Adjust contrast ratio of LCD |
| 【Shift】 + 【S】 | Adjust brightness of LCD |
| 【Shift】 + 【Flag】 | DIY: create custom form |
| 【Shift】 + 【Wrap】 | Library: Preset label collections |
| 【Shift】 + 【Template】 | Preview the label outline |
| 【Shift】 + 【M】 | Turn on/off LCD back-lit |


Create General Labels

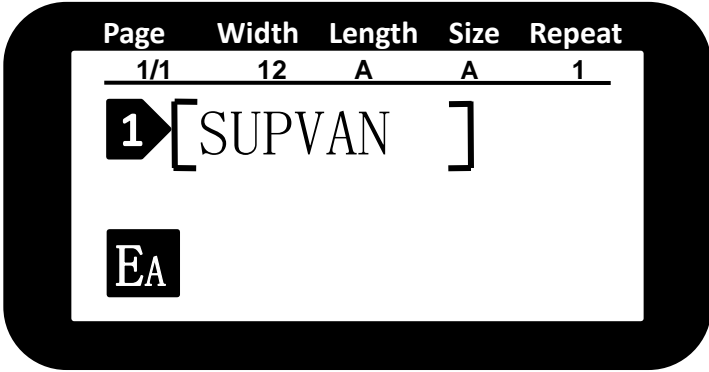


Turn on the printer and input the content, such as SUPVAN.

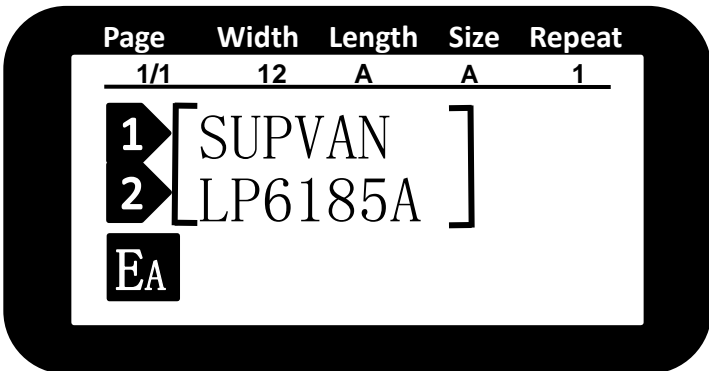


Press Enter to create a new line and input the content, such as LP6185A.

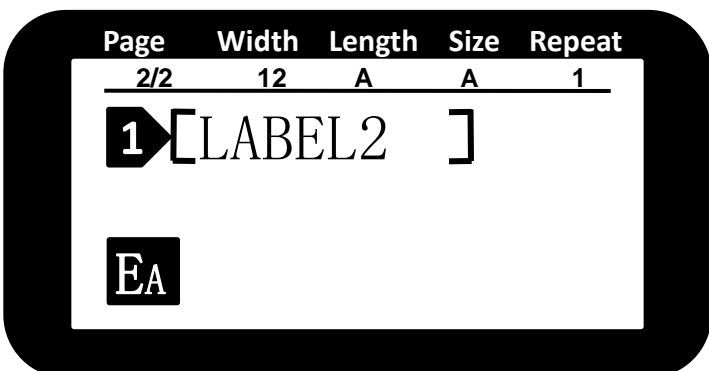

 To create a new label, press "Add" and it will automatically turn to page 2. Then input the content, such as LABEL2.




Label1

 

Label2


Create Flag Labels

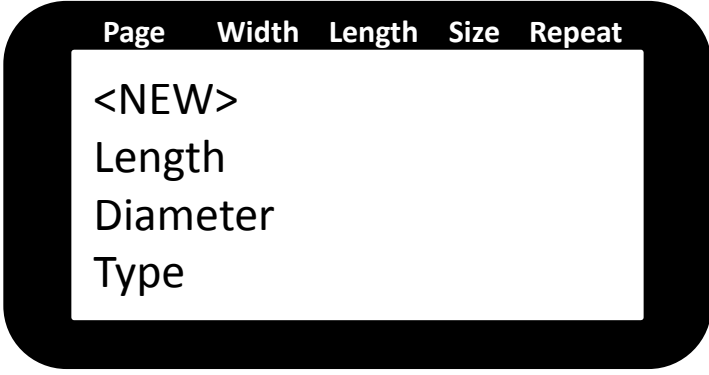



To create a flag label, press “Flag”, then input the length, diameter and type details.

| | |
|----------|---|
| Length | Label’s length, can be automatic or specify (10-200mm) |
| Diameter | Tube’s diameter, can be automatic or specify (2-90mm) Perimeter= π *Diameter |
| Type | AA:AA; AA:BB |

AA:AA

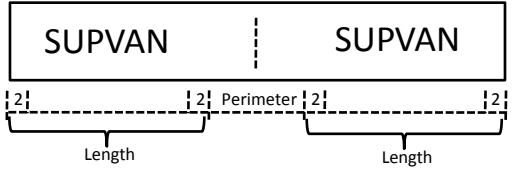


AA:BB

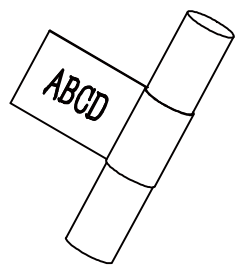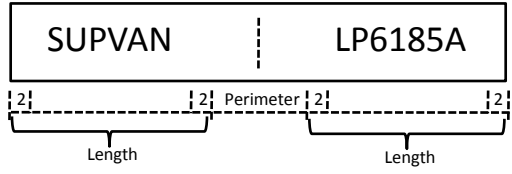


When making flag labels, please use Non Laminated or Strong Adhesive Label Tapes only.

Create Wrap Labels

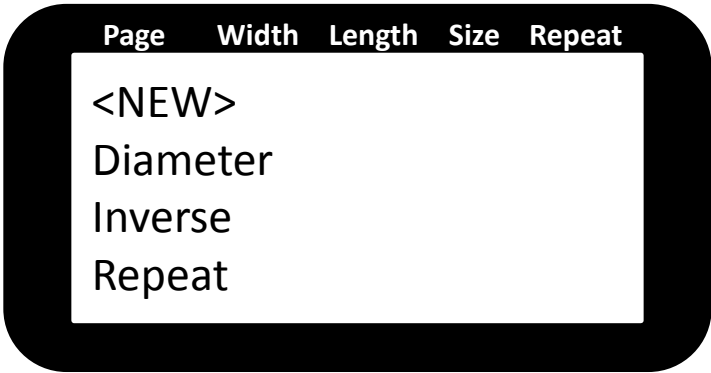


To create a wrap label, press “Wrap”, then input the diameter details, choose inverse and repeat.


| | |
|----------|---|
| Diameter | Tube’s diameter, can be automatic or specify (3-90mm) |
| Inverse | Turn on/off inverse |
| Repeat | Repeat can only work for single line label. |

 


Normal

 

Repeat

 


Repeat + Inverse

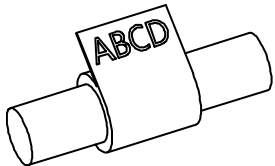


When making wrap labels, please use Wrap Label Tapes only.

Create Template Labels

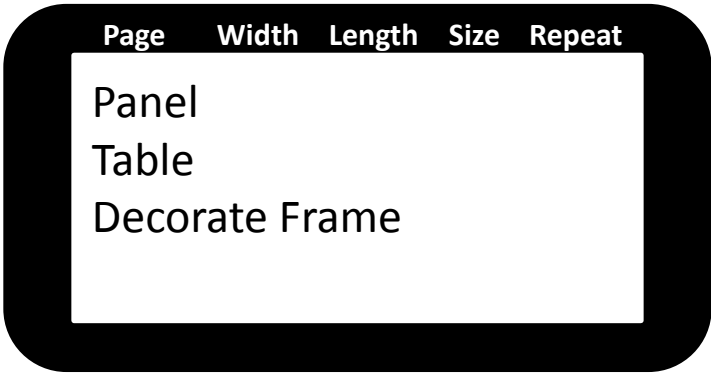


To create a template label, press “Template”, then choose the template style you want.


| | |
|----------------|--|
| Panel | 4 different preinstall panel templates |
| Table | 26 different preinstall table templates |
| Decorate Frame | 86 different preinstall decorate frame templates |

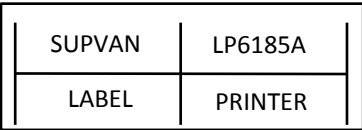

Panel

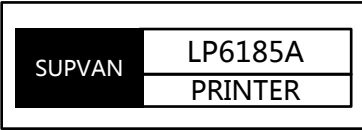


Table

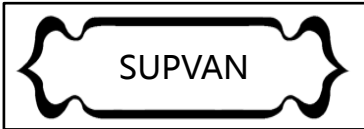


Template

Label Library

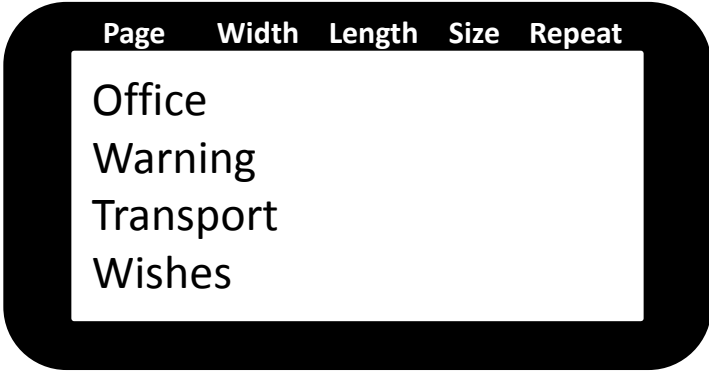

To choose a label from label library, press “Library”, then choose the label category you want.

| Category | Office | Warning | Transport | Wishes | Sales |
|------------|--------|---------|-----------|--------|-------|
| Quantities | 33 | 8 | 6 | 14 | 19 |

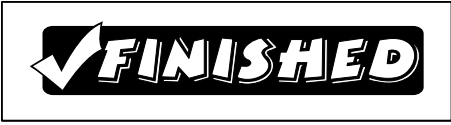

Office



Warning



Wishes



Transport




Sales

This label printer can connect to computer.

System requirements:

Windows XP / Vista / 7 / 8 / 10

After installing the software, you can get more printing choices.

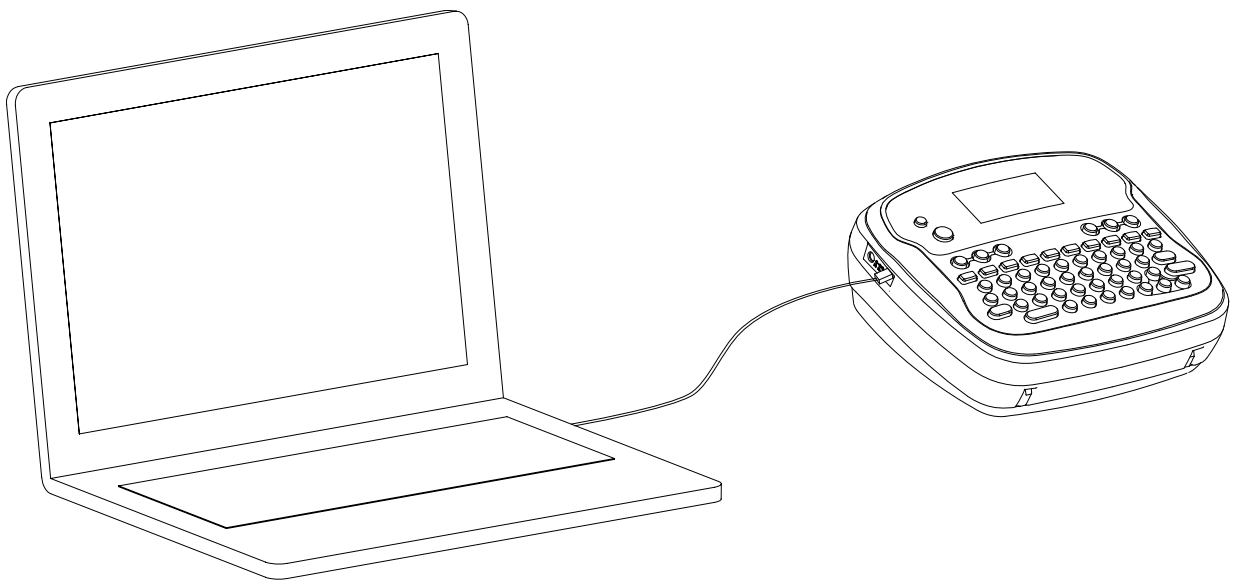

Troubleshooting

| | Common problems | Fault cause | Handling methods |
|---|---|--|---|
| 1 | Turning on without LCD lighting up | <ol style="list-style-type: none"> 1. Wire between main control panel and keyboard control panel connected improperly or damaged 2. LCD disconnected or damaged 3. Keyboard control panel damaged 4. Main control panel damaged 5. Power supply not energized | <ol style="list-style-type: none"> 1. Reconnect or replace the wire between main control panel and keyboard panel 2. Reconnect LCD or replace it 3. Replace keyboard control panel 4. Replace main control panel 5. Replace power supply |
| 2 | Turning on failure with Lithium battery | <ol style="list-style-type: none"> 1. Lithium battery is damaged or low 2. Main control panel damaged 3. Wire between main control panel and keyboard control panel disconnected or damaged | <ol style="list-style-type: none"> 1. Replace the Lithium battery or recharge the battery 2. Replace main control panel 3. Reconnect or replace the wire between main control panel and keyboard control panel |
| 3 | Turning on failure with AA alkaline batteries | <ol style="list-style-type: none"> 1. The battery is low 2. The battery cable damaged or connected improperly 3. Main control panel damaged 4. Wire between main control panel and keyboard control panel disconnected or damaged | <ol style="list-style-type: none"> 1. Replace the battery 2. Replace the battery cable or connect it properly 3. Replace main control panel 4. Reconnect or replace the wire between main control panel and keyboard control panel |

Troubleshooting

| | Common problems | Fault cause | Handling methods |
|---|---|---|---|
| 4 | LCD screen blurred | <ol style="list-style-type: none"> 1. LCD disconnected or damaged 2. Keyboard control panel damaged | <ol style="list-style-type: none"> 1. Reconnect LCD or replace it 2. Replace keyboard control panel |
| 5 | Interface display "Install label" after consumable installation | <ol style="list-style-type: none"> 1. Consumable installed improperly 2. Non-matching consumables 3. Consumable's security chip damaged or no program 4. Consumable's security chip has excessive glue or dirt 5. Anti-counterfeiting unit of the printer damaged or metal contact deformation 6. Anti-counterfeiting unit of the printer connected improperly 7. Main control panel damaged | <ol style="list-style-type: none"> 1. Install consumable properly by following the user manual 2. Use Supvan original consumables 3. Replace the consumable or update the program 4. Remove the excessive glue or dirt on consumable's security chip 5. Replace anti-counterfeiting unit of the printer 6. Connect the anti-counterfeiting unit properly 7. Replace main control panel |

| | Common problems | Fault cause | Handling methods |
|---|------------------------------|--|---|
| 6 | Label jam | <ol style="list-style-type: none"> 1. Consumable installed improperly 2. Labels layered pasted at the exit 3. Exit jammed 4. Full-cutter not reset 5. Print head compaction mechanism damaged | <ol style="list-style-type: none"> 1. Install consumables properly by following the user manual 2. Replace good quality consumables 3. Clean out the printed labels at the exit 4. Replace the full-cut assembly or main control panel 5. Replace the print head compaction assembly |
| 7 | Abnormal sound when printing | <ol style="list-style-type: none"> 1. Foreign bodies in the printer 2. The internal gears damaged 3. Consumable installed improperly or damaged 4. Ribbon detect unit damaged | <ol style="list-style-type: none"> 1. Clean out foreign bodies inside the machine 2. Replace the gears 3. Install consumables properly or replace with good consumables 4. Replace the ribbon detection unit |

| | Common problems | Fault cause | Handling methods |
|---|--|--|---|
| 8 | Unclear print | <ol style="list-style-type: none"> 1. Print head connection problem 2. Dirt on print head 3. Non-matching consumable 4. Print head is broken 5. Print head pressure weakened | <ol style="list-style-type: none"> 1. Plug print head connection firmly 2. Use cotton alcohol swab to remove dirt from the print head 3. Use Supvan original consumables 4. Replace print head 5. Replace print head compaction assembly |
| 9 | Printer worked without content printed | <ol style="list-style-type: none"> 1. Printing content is space 2. Back cover not installed 3. Print head connected improperly 4. Print head is broken 5. Main control panel damaged 6. Main motor photoelectric detect unit damaged or fall off 7. Keyboard control panel damaged 8. Battery is low | <ol style="list-style-type: none"> 1. Input the content 2. Close the back cover 3. Plug print head connection firmly 4. Replace the print head 5. Replace main control panel 6. Replace main motor photoelectric detect unit or reinstall it 7. Replace keyboard control panel 8. Replace battery |

Troubleshooting

| | Common problems | Fault cause | Handling methods |
|----|---|---|--|
| 10 | Print content incomplete | <ol style="list-style-type: none"> 1. Print head connection problem 2. Dirt on print head 3. Non-matching consumable 4. Print head is broken 5. Ribbon knitted | <ol style="list-style-type: none"> 1. Plug print head connection firmly 2. Remove dirt from print head 3. Use Supvan original consumables 4. Replace print head 5. Replace consumable |
| 11 | Uncuttable | <ol style="list-style-type: none"> 1. Battery is low 2. Cutter's life is overdue 3. Glue on the cutter 4. Full-cut transmission assembly damaged | <ol style="list-style-type: none"> 1. Replace the battery 2. Replace the cutter 3. Clean the cutter with a cotton swab 4. Replace the full-cut transmission assembly |
| 12 | Interface display "Printing..." without printer working | <ol style="list-style-type: none"> 1. Full-cut transmission assembly damaged 2. Full-cut detection unit connected improperly or damaged 3. Main motor connected improperly or damaged 4. Main control panel damaged 5. Keyboard control panel damaged 6. Program lost | <ol style="list-style-type: none"> 1. Replace the full-cut transmission assembly 2. Reconnect the full-cut detect unit or replace it 3. Reconnect the main motor or replace it 4. Replace main control panel 5. Replace keyboard control panel 6. Replace keyboard control panel |

Troubleshooting

| | Common problems | Fault cause | Handling methods |
|----|--|--|--|
| 13 | No detection after consumable depletion | <ol style="list-style-type: none"> 1. Ribbon photoelectric detect unit connected improperly or damaged 2. Main control panel damaged | <ol style="list-style-type: none"> 1. Connect the ribbon photoelectric detect unit properly or replace it 2. Replace main control panel |
| 14 | Interface display "Label run out, Replace new" | <ol style="list-style-type: none"> 1. Consumable used up 2. Consumable anti-fake chip damaged | <ol style="list-style-type: none"> 1. Check if the consumable is used up. Change it if necessary. 2. Replace new consumable |
| 15 | Label involved in rubber roller | <ol style="list-style-type: none"> 1. Consumable used up without detection 2. Glue on rubber roller | <ol style="list-style-type: none"> 1. Test if the photoelectric detect unit damaged or connected improperly 2. Clean glue on rubber roller |
| 16 | Ribbon rewind shaft not work | <ol style="list-style-type: none"> 1. Glue on the consumable 2. Unwinding force of ribbon is too strong | <ol style="list-style-type: none"> 1. Clean the glue on consumable or skip this length 2. Replace the consumable |
| 17 | Automatically stop without printing content | <ol style="list-style-type: none"> 1. Consumable used up without detection 2. Ribbon photoelectric detect unit lost efficacy | <ol style="list-style-type: none"> 1. Replace the consumable 2. Replace ribbon photoelectric detect unit |

Symbol

| Unit | | | | | | | | | | | | | |
|------|----------------|-----|-----|----|----|----------------|----|----|----|----|----|----|---|
| ° | ' | " | \$ | ¥ | ₹ | ¢ | £ | % | @ | °C | °F | \$ | % |
| ‰ | @ | mil | cm | km | KM | m ² | mg | kg | cc | ° | ○ | ⊗ | € |
| ⊕ | m ³ | ml | mol | | | | | | | | | | |

| Number | | | | | | | | | | | | | | |
|--------|------|------|-----|-----|-----|------|------|------|------|------|------|------|------|------|
| i | ii | iii | iv | v | vi | vii | viii | ix | x | I | II | III | IV | V |
| VI | VII | VIII | IX | X | XI | XII | 1. | 2. | 3. | 4. | 5. | 6. | 7. | 8. |
| 9. | 10. | 11. | 12. | 13. | 14. | 15. | 16. | 17. | 18. | 19. | 20. | (1) | (2) | (3) |
| (4) | (5) | (6) | (7) | (8) | (9) | (10) | (11) | (12) | (13) | (14) | (15) | (16) | (17) | (18) |
| (19) | (20) | ① | ② | ③ | ④ | ⑤ | ⑥ | ⑦ | ⑧ | ⑨ | ⑩ | (-) | (=) | (≡) |
| (四) | (五) | (六) | (七) | (八) | (九) | (十) | ⑪ | ⑫ | ⑬ | ⑭ | ⑮ | ⑯ | ⑰ | ⑱ |
| ⑲ | ⑳ | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | | |

Symbol

Mathematics

| | | | | | | | | | | | | | | |
|---|----|---|---|---|-----|----|---|---|---|----|---|---|---|---|
| ≈ | ≡ | ≠ | = | ≤ | ≥ | < | > | ≠ | ≠ | :: | ± | + | - | × |
| ÷ | / | ∫ | ∫ | ∞ | ∞ | ∧ | ∨ | Σ | Π | ∪ | ∩ | ∈ | ∴ | ∴ |
| ⊥ | // | ∠ | ∩ | ⊙ | ≅ | ∞ | √ | ≅ | ≅ | ≅ | ≅ | + | - | < |
| > | = | ~ | L | △ | log | ln | ¼ | ½ | ¾ | | | | | |

Bracket

| | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| (|) | ⌒ | ⌒ | { | } | ⌒ | ⌒ | (|) | ⌒ | ⌒ | 【 | 】 | ⌒ | ⌒ | 《 | 》 |
| ≅ | ≅ | < | > | ⌒ | ⌒ | 「 | 」 | ┌ | ┐ | 『 | 』 | ⌒ | ⌒ | (|) | { | } |
| (|) | ‘ | ’ | “ | ” | ” | ” | 、 | 、 | | | | | | | | |

Punctuation

| | | | | | | | | | | | | | | |
|----|-----|----|-----|-----|---|---|---|---|---|---|---|----|---|-----|
| , | 、 | 。 | 。 | ； | ： | ？ | ！ | ： | … | ’ | 、 | 々 | ~ | |
| ˘ | - | , | 、 | 。 | • | ； | ： | ？ | ！ | | - | | — | |
| { | — | # | & | * | ※ | § | ” | № | ⊕ | % | - | — | — | --- |
| -- | --- | -- | — | — | # | & | * | ♀ | ♂ | ⊕ | ⊙ | // | | / |
| \ | / | \ | am. | pm. | ⊕ | ⊕ | ⊕ | ⊕ | ⊕ | | | | | |

Symbol

Arrow

| | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| ↑ | ↓ | ← | → | ↖ | | ↗ | ↘ | ↙ | ↘ | ↙ | ↘ | ↙ | ↘ | ↙ |
| ↕ | ↔ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ |
| ↕ | ↔ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ | ↻ |
| ↔ | ↔ | ↔ | ↔ | ↔ | ↔ | ↔ | ↔ | ↔ | ↔ | ↔ | ↔ | ↔ | ↔ | ↔ |

Superscript

| | | | | | | | | | | | | | | |
|----|---|---|---|---|---|---|---|---|---|---|----|---|-----|---|
| .. | © | ª | ® | º | ² | ³ | ¹ | º | • | / | // | \ | TEL | ™ |
| “ | ” | ° | ± | + | - | ⁴ | ⁵ | ⁶ | ⁷ | ⁸ | ⁹ | ᵃ | ᵇ | ᶜ |
| ᵉ | ᵈ | ᶠ | ᵍ | ʰ | ᶦ | ʲ | ᵏ | ˡ | ᵐ | ⁿ | ᵒ | ᵖ | ᵑ | ʳ |
| ˢ | ᵗ | ᵘ | ᵛ | ʷ | ˣ | ʸ | ᶻ | ᵅ | ᵝ | ᵞ | | | | |

Subscript

| | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| ˆ | ± | + | - | ₀ | ₁ | ₂ | ₃ | ₄ | ₅ | ₆ | ₇ | ₈ | ₉ | ₐ |
| ᵇ | ᶜ | ᵉ | ᵈ | ᶠ | ᵍ | ʰ | ᶦ | ʲ | ᵏ | ˡ | ᵐ | ⁿ | ᵒ | ᵖ |
| ᵑ | ʳ | ˢ | ᵗ | ᵘ | ᵛ | ʷ | ˣ | ʸ | ᶻ | ᵅ | ᵝ | ᵞ | | |

Symbol

Russian

| | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| А | Б | В | Г | Д | Е | Ё | Ж | З | И | Й | К | Л | М | Н |
| О | П | Р | С | Т | У | Ф | Х | Ц | Ч | Ш | Щ | Ъ | Ы | Ь |
| Э | Ю | Я | а | б | в | г | д | е | ж | ё | з | и | й | к |
| л | м | н | о | п | р | с | т | у | ф | х | ц | ч | ш | щ |
| ъ | ы | ь | э | ю | я | | | | | | | | | |

Pinyin

| | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|----|---|---|
| ā | á | ǎ | à | ō | ó | ǒ | ò | ē | é | ě | è | ī | í | ǐ |
| ì | ū | ú | ǔ | ù | ǖ | ǘ | ǚ | ù | ü | ê | α | ín | ń | ǚ |
| ñ | g | | | | | | | | | | | | | |

Latin

| | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| A | B | Г | Δ | E | Z | H | Θ | I | K | Λ | M | N | Ξ | O |
| Π | P | Σ | T | Υ | Φ | Χ | Ψ | Ω | α | β | γ | δ | ε | ζ |
| η | θ | ι | κ | λ | μ | ν | ξ | ο | π | ρ | σ | τ | υ | φ |
| χ | ψ | ω | | | | | | | | | | | | |

Symbol

Tabulate

| | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| ┌ | ┐ | └ | ┘ | ┙ | ┚ | ┛ | ├ | ┤ | ┥ | ┦ | ┧ | ┨ | ┩ | ┪ | ┫ |
| ┬ | ┴ | ┵ | ┲ | ┳ | ┴ | ┴ | ┴ | ┴ | ┴ | ┴ | ┴ | ┴ | ┴ | ┴ | ┴ |
| ┌ | × | ┐ | └ | ┘ | ┚ | ┛ | ├ | ┤ | ┥ | ┦ | ┧ | ┨ | ┩ | ┪ | ┫ |
| ┌ | ┐ | └ | ┘ | ┙ | ┚ | ┛ | ├ | ┤ | ┥ | ┦ | ┧ | ┨ | ┩ | ┪ | ┫ |
| ┌ | ┐ | └ | ┘ | ┙ | ┚ | ┛ | ├ | ┤ | ┥ | ┦ | ┧ | ┨ | ┩ | ┪ | ┫ |
| ┌ | ┐ | └ | ┘ | ┙ | ┚ | ┛ | ├ | ┤ | ┥ | ┦ | ┧ | ┨ | ┩ | ┪ | ┫ |
| ┌ | ┐ | └ | ┘ | ┙ | ┚ | ┛ | ├ | ┤ | ┥ | ┦ | ┧ | ┨ | ┩ | ┪ | ┫ |
| ┌ | ┐ | └ | ┘ | ┙ | ┚ | ┛ | ├ | ┤ | ┥ | ┦ | ┧ | ┨ | ┩ | ┪ | ┫ |

Hiragana

| | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| あ | い | う | え | お | か | き | く | け | こ | さ | し | す | せ | そ | た | ち |
| つ | て | と | な | に | ぬ | ね | の | は | ひ | ふ | へ | ほ | ま | み | む | め |
| も | や | ゆ | よ | ら | り | る | れ | ろ | わ | を | ん | が | き | ぎ | ぐ | げ |
| ざ | じ | ず | ず | ぞ | だ | ぢ | づ | で | ど | ば | び | ぶ | べ | ぼ | ぱ | ぴ |
| ぷ | ぺ | ぽ | ぱ | ぴ | ぷ | ぺ | ぽ | あ | い | う | え | お | や | ゆ | よ | っ |
| わ | ゐ | ゑ | | | | | | | | | | | | | | |

Symbol

Katakana


| | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| ア | イ | ウ | エ | オ | カ | キ | ク | ケ | コ | サ | シ | ス | セ | ソ | タ | チ | ツ |
| テ | ト | ナ | ニ | ヌ | ネ | ノ | ハ | ヒ | フ | ヘ | ホ | マ | ミ | ム | メ | モ | ヤ |
| ユ | ヨ | ラ | リ | ル | レ | ロ | ワ | ヲ | ン | ガ | ギ | グ | ゲ | ゴ | ザ | ジ | ズ |
| ゼ | ゾ | ダ | ヂ | ヅ | デ | ド | バ | ビ | ブ | ベ | ボ | ァ | ィ | ゥ | ェ | ォ | ャ |
| ュ | ョ | ッ | ヴ | ヰ | ヱ | カ | ケ | | | | | | | | | | |

Safety

| | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |

Symbol

Electrical

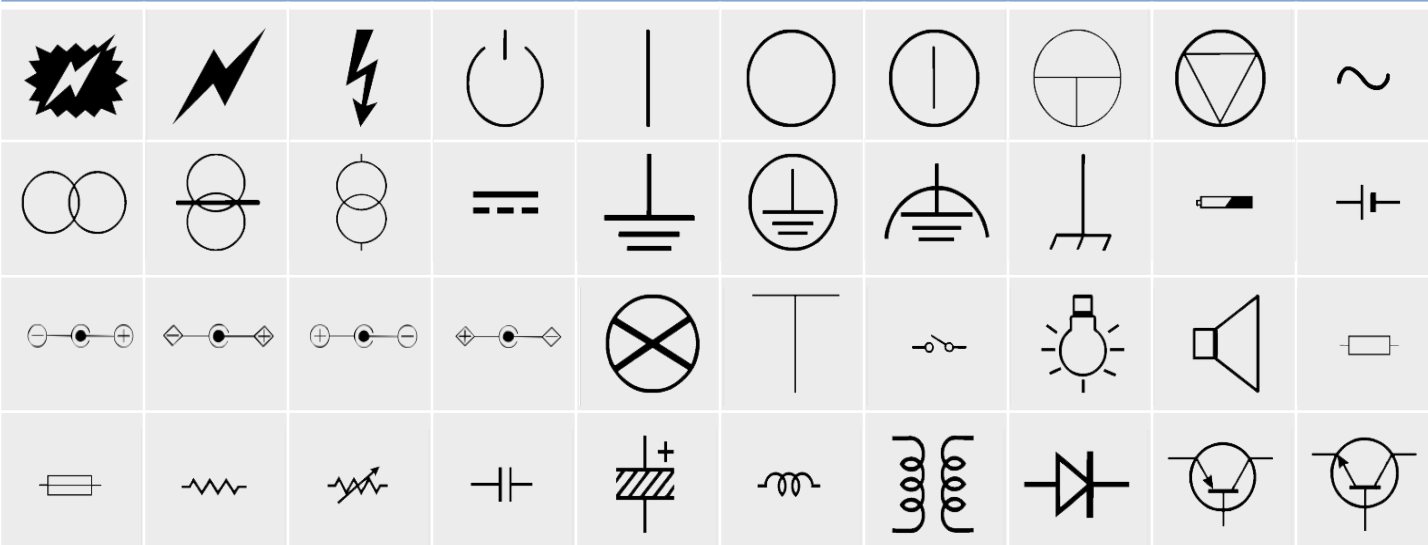

Communicate



Symbol


Prohibited



Transport




Office

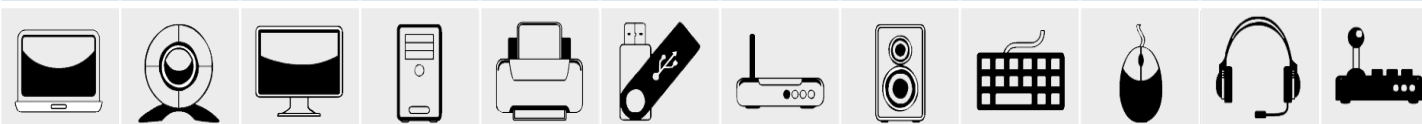

Symbol


Geometry

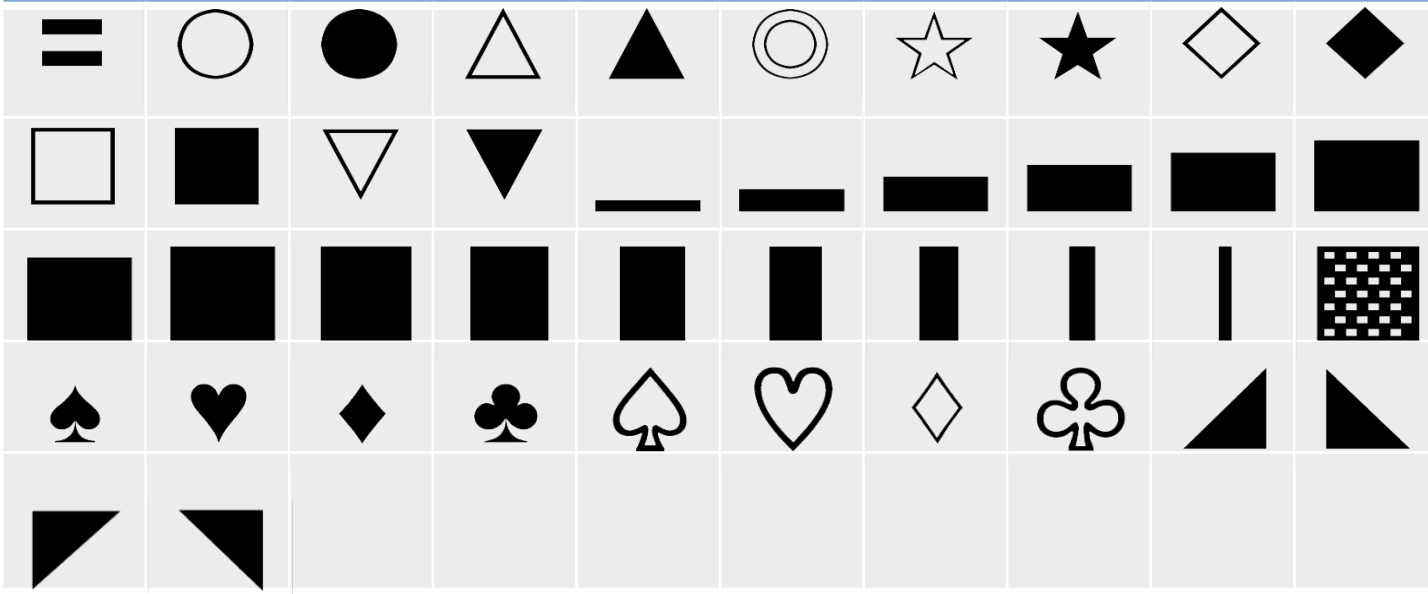

Animal



Insect

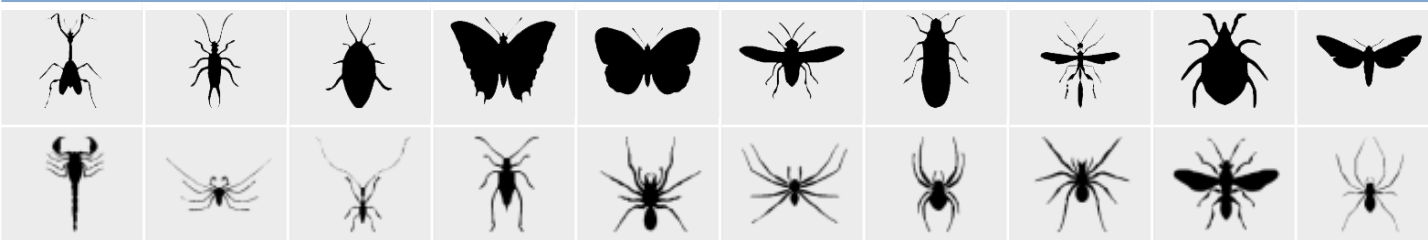


Symbol

People



Food

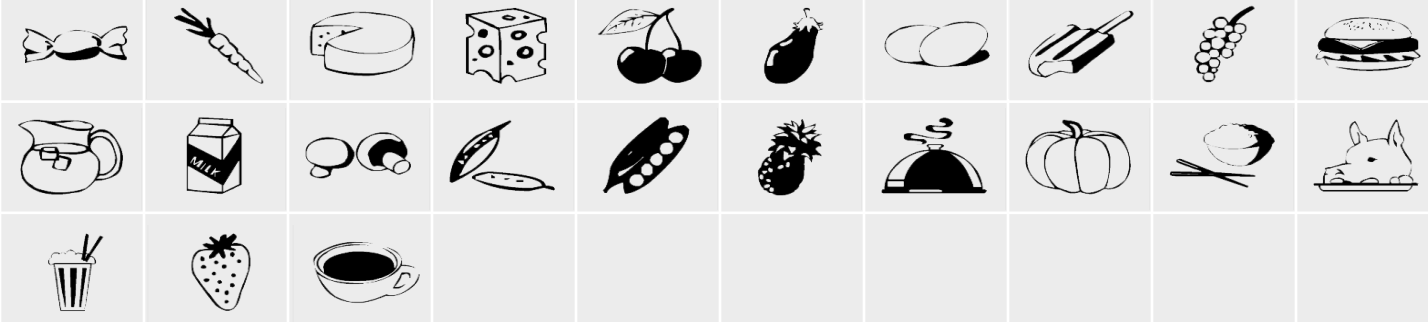


Sports




Symbol

Creativity

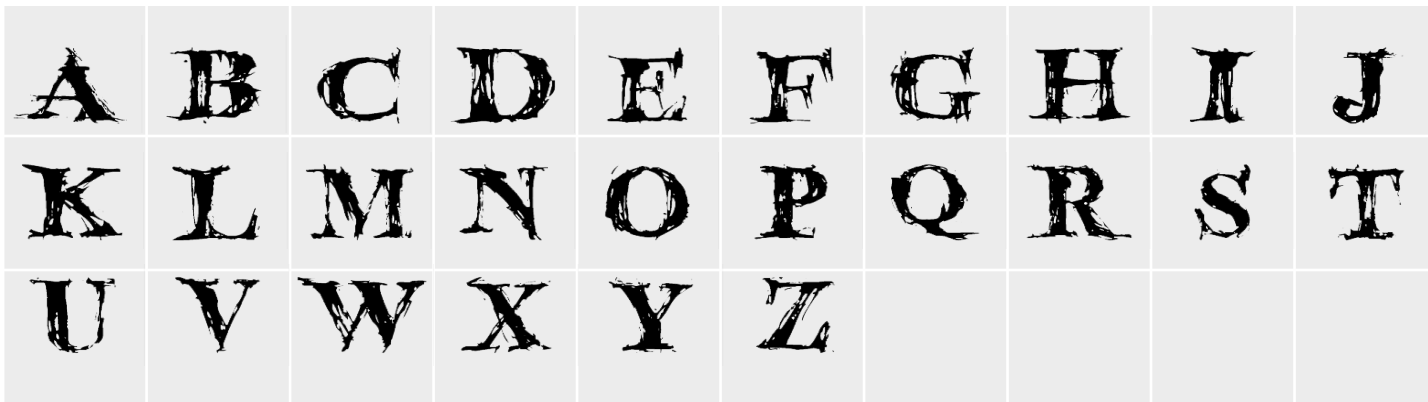


Daily Use

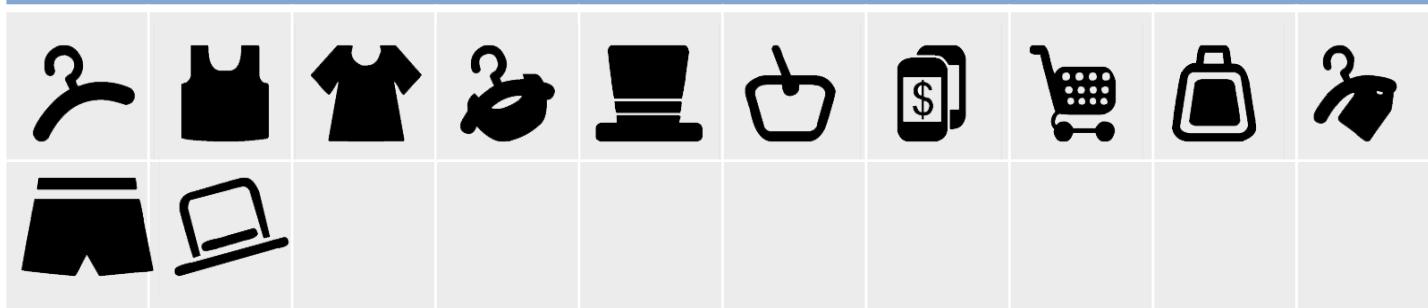


Template Details


Panel

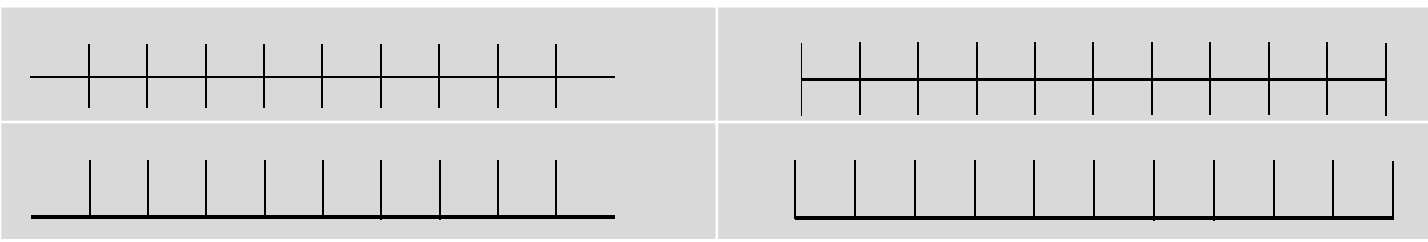

Table

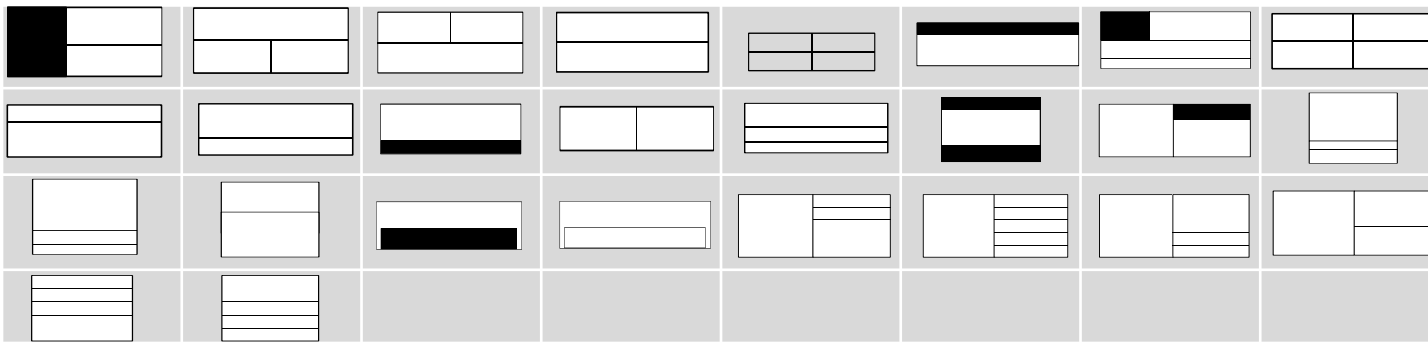

Decorate Frame

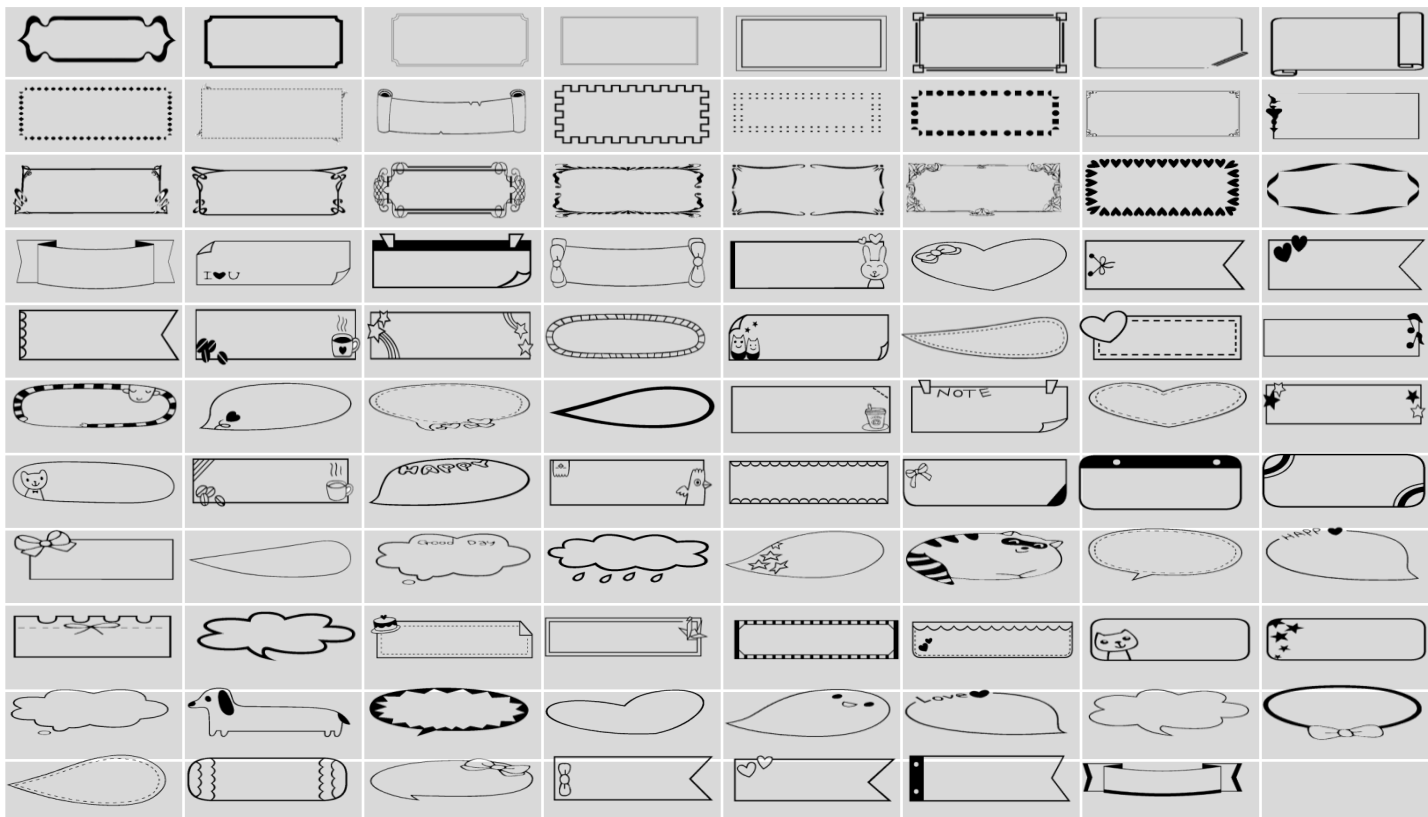

Library Details

Office







| | | | | |
|------------------------|---------------------------------|------------------------------|-----------------------|----------------------|
| pending | ASAP! | please sign and return | FINISHED | personal |
| Standby | CONFIDENTIAL | DO NOT CIRCULATE | URGENT | FOR YOUR INFORMATION |
| PLEASE BE QUIET | | FOR INTERNAL USE ONLY | | OUTGOING MAIL |
| OUTGOING MAIL | KEEP CLOSED | NO MOBILE PHONE | NO PHOTOGRAPHY | |
| NO VIDEO | AUTHORIZED PERSONAL ONLY | ROAD CLOSED | DRINKING WATER | |
| NO SMOKING | | NO SMOKING | | KEEP CLEAN |
| DO NOT DISTURB | NO FOOD | | TURN LIGHT OFF | |
| REFERENCE ROOM | VISITOR REGISTRATION | | NO ADMITTANCE | |
| TRASH CAN | | RECYCLE BIN | | BATTERY |

Warning

| | | | |
|---------------------|----------------------|------------------------|---------------------------|
| DO NOT TOUCH | CAUTION! NOT! | WATCH YOUR STEP | DANGER! |
| CAUTION! | WARNING! | NO ENTRY | ELECTRICAL HAZARD! |

Library Details

Transport

| | | |
|---|--|--|
|  THIS SIDE UP | =NO CURVE= |  FRAGILE  |
|  HANDLE WITH CARE |  CARRY WITH CARE |  KEEP DRY |

Wishes

| | | |
|---|--|---|
|  HAPPY BIRTHDAY |  MERRY CHRISTMAS |  HAPPY NEW YEAR |
|  HAPPY FATHER'S DAY |  HAPPY MOTHER'S DAY |  THANKS TEACHER |
|  HAPPY ANNIVERSARY |  HAPPY EVERY DAY |  THANKS |
|  I LOVE YOU |  BEST WISHES |  GOOD LUCK |
|  SURPRISE |  HAPPY VALENTINE'S DAY | |

Sales

| | | | | |
|---|--|---|--|--|
|  SALE |  BEST SELLER |  WEEKLY BEST SELLER |  SPECIAL DEAL |  MANAGER RECOMMENDED |
|  CLEARANCE |  NEW ARRIVAL |  PUSH |  PULL |  OPEN |
|  CLOSE |  SALE SALE |  SPECIAL DISCOUNT |  PRESALE |  SAMPLE |
|  2nd BUY 1 GET 2nd ONE 50% OFF |  TODAY'S SPECIAL |  HANDLE MADE |  GIFT | |

SUPVAN

Organized, Simple, Done.